 


# User's Manual

PT-112/212/412/912

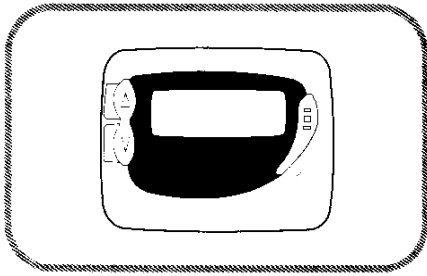

## TABLE OF CONTENTS

<b>1. APPEARANCE</b> .....	<b>1</b>
1. Appearance.....	1
2. Icons on LCD.....	2
3. Several Common Display.....	3
<b>2. OPERATING INSTRUCTIONS</b> .....	<b>4</b>
2.1 Message Reading.....	4
2.2 Message Deletion.....	5
2.3 Message Locking & Unlocking.....	7
2.4 Turning On & Off the Pager.....	8
2.5 Low Battery Indication.....	10
2.6 Battery Replacement.....	11
2.7 Out-Of-Range Indication.....	12
<b>3. FUNCTION SETTING</b> .....	<b>13</b>
3.1 Selecting the alert Mode.....	13
3.2 Time & Alarm Setting.....	15
3.3 Auto Power On/Off.....	17
3.4 Tone / Melody Alert Setting.....	19
3.5 Unread Message Reminder.....	20
3.6 Special Information Display.....	21

## 2. ICONS ON LCD

	Tone Alert Selected		With in transmission Range
	Vibration Alert Selected		Unread Message Icon
	Mute Selected		Duplicated Message Icon
	Low Battery Icon		Message Locked Icon
	Melody Alert Selected		Long Message Icon

2

## 2. OPERATING INSTRUCTIONS

 
### 2.1 MESSAGE READING

When the pager receives a paging message, it will give an alert tone or a melody which has been selected if it is in the NORMAL mode (it will vibrate if it is in VIBRATION mode while there would be no any alert signal when it is in MUTE mode.) Then the numeric message will be displayed in the LCD with an UNREAD icon.

During the pager is beeping or vibrating, you can stop the beeping and vibration by pressing on any one of the three buttons. Then the pager's LCD will be back to normal receiving status after 8 seconds.

#### To Read The Message:


- (1) Press the READ button once, the LCD would display the receiving time of the latest received message which is numbered 01 in the blank. The second latest received message would be numbered 02 and so on.

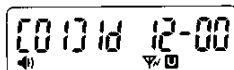

4


## APPEARANCE

### 1. APPEARANCE

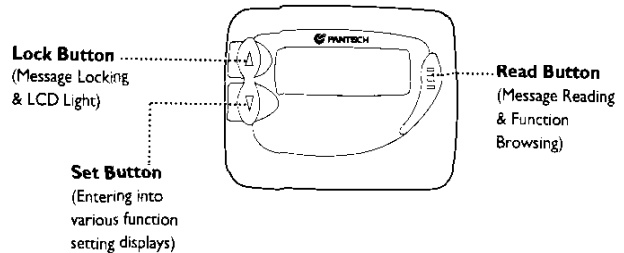

1


### 3. SEVERAL COMMON DISPLAY

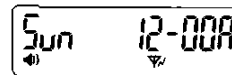

Normal Receiving Status




Power Off Status

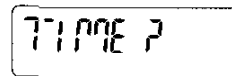


Mode Setting



 Power On Status

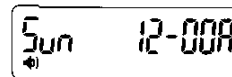

Out-of-Range

 

Low Battery

3

- (2) If you press the READ button again, the message content will be displayed.
- (3) You can go on the read the previous messages by pressing the READ button. The UNREAD icon would disappear when all the messages have been read.




### 2.2 MESSAGE DELETION

#### Delete All Messages


##### Remarks

- This function is available only when there are at least 2 messages in the pager.
- The Locked Messages will be deleted all together at one time.

- (1) Press the READ button once, the receiving time and order (which is numbered [01]) of the latest received message will be shown.

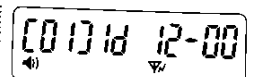

 - (2) Press and hold the SET button for 2 seconds. Then the words "ERASE ALL?" will be shown in the LCD.


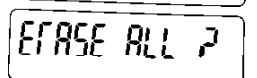


5

- Press the SET button again to tell the pager to carry out this action and all messages will be deleted after a short melody tone is heard.
- After the deletion, the pager will go back to normal receiving status.

### Delete A Message



- Keep on pressing the READ button until the message you want to delete appears in the LCD.
- Press and hold the LOCK button for 3 seconds and that message will be deleted after a short melody tone is heard.  
(\*The deleted message is just the one shown in the LCD.)

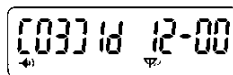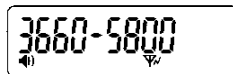

6

### Unlock A Message


- Keep on pressing the READ button until the message you want to unlock appears.  
\*To identify it is a locked message or not, please make sure the MESSAGE LOCKED icon is shown in the button of the LCD.
- Press the LOCK button, the MESSAGE LOCKED icon disappears and then this message is released from the lock and ready to be overwritten by new message. The pager will go back to normal receiving status.

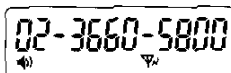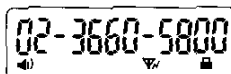

## 2.4 TURNING ON & OFF THE PAGER

### Turn Off The Pager

- Press the SET button once when the pager is in normal receiving status. Then the words "PWR OFF?" would appear in the LCD.
- Hold on the LOCK button (for around 3 seconds) until the flickering "OFF" icon shown on the bottom of the LCD.


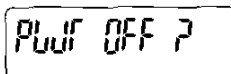


8

## 2.5 LOW BATTERY INDICATIONS

When the battery power gets too low or exhausted, the following display will be show with a beep tone of 8 second to alert you to change the battery.

After the 8 second beep tone, the pager will go bak to normal receiving status with a Low Battery Icon in the bottom of the LCD. In this situation, the reception quality of the pager can be negatively affected so the battery should be changed as soon as possible.

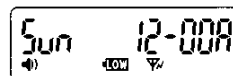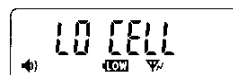

10

## 2.3 MESSAGE LOCKING & UNLOCKING



The pager can store up to 17 messages among which received 25 messages. The locked messages will be prevented from being overwritten by the new message.

### Remarks

The Locked Messages will be lost during the change of the battery. Therefore, please record down important message, if any, in another way.

### Lock A Message

- Keep on pressing the READ button until the message you want to lock appears in the LCD.
- Press the LOCK button once and the MESSAGE LOCK icon would appear.
- Then that message is locked and the LCD will go back to normal receiving status.

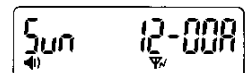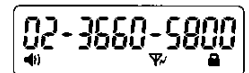

7

### Remarks

- In the Power Off Status, the Time and Day of Week will still be shown in the LCD and the alarm Clock functions as well.

### Turning On the Pager


- Hold on the LOCK button (for around 2 second) until a fast beep tone lasting for 5 seconds sound with all the icons displayed as the picture beside. (To stop this power-on beep tone, just press any one of the three button once.)



Now you will be back to the Normal Receiving Status.

What is Normal Receiving Status?

Normal Receiving Status is the status when the pager is ready to receive new message. In this status, as the picture, time, day of week and any icon representing any selected function will be displayed.

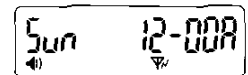

9

## 2.6 BATTERY REPLACEMENT

- Slide the battery cover lock in the direction as shown in the picture to the unlock position. Then remove the battery cover by smoothly pulling it to the left.
- Take out the old and exhausted battery and put the new one into the battery compartment.  
- make sure the battery is placed in the right polarity (The polarity marking inside the battery compartment can help you to place the battery correctly.)  
- a fast beep tone lasting for 5 seconds will be heard with the LCD displaying all the icons.  
- the LCD will go back to the normal receiving status as mentioned in Section 2.4 - Turning on the Pager.
- Put the battery cover back on the pager by pushing it smoothly to the right and then lock the battery cover by sliding the battery cover lock in the direction as the picture shows.



11

## 2.7 OUT-OF-RANGE INDICATION

When you are in a place which the paging operator's network cannot cover or in a conveyed area (e.g. basement or elevator) where RF signal cannot penetrate into. Then the RF signal indicator icon will be disappeared on the bottom of the LCD.





If you are expecting a call, you may have to go back to somewhere which the paging network can cover of RF signal can reach. Then the Out-of-Range indicator will.

If you cannot leave this out-of-range area at this moment, you may call back to the paging operator to check if you have a call or not time by time.

12

### Select the mode

- (1) Press the SET button until the word "MODE?" appears in the LCD.
- (2) Press the LOCK button once and the LCD will display the alert mode next to the one in use.
- (3) If you want to look around, press the READ button until you find the one you want in the LCD.
- (4) Press the LOCK button and the mode you want is selected. Then the pager goes back to normal receiving status.

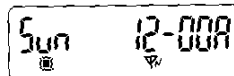
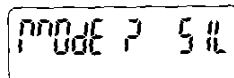
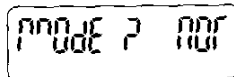
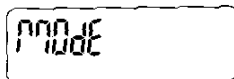


14

### Setting the Alarm

    (A pleasant melody will come to alert you for something at the time you have pre-set).

- (1) Keep on pressing the SET button until the word "ALARM?" appears in the LCD.
- (2) Press the LOCK button once and you will go into the alarm setting display in which you can see the alarm hour digit flickering.
- (3) Keep on pressing the READ button until the hour you want to set the alarm to appears. (When you are setting the hour digit, the last alphabet will change from "A" to "P" or vice versa whenever the hour digit goes from 12 to 1. "A" stands for AM while "P" for PM.)
- (4) Repeating steps (2) & (3), you can go on to set in minute digits of the alarm time.
- (5) After setting the minute digits, you will go to a display which ask you if you want to enable or disable the alarm as the picture beside. Press the READ button to choose between "ALM ENABLE" and "ALM DISABLE".

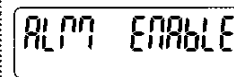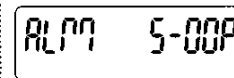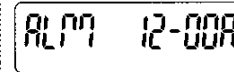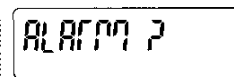

16

## 3. FUNCTION SETTING

### 3.1 SELECTING THE ALERT MODE

User can select any one of the three modes-Tone Alert, Vibration Alert and Mute for different circumstances. For example, mute mode can be set to avoid unpleasant disturbance during sleep or in a meeting

The Three Modes shown in the LCD.



- \*NOR – It stands for normal and means Tone Alert mode in which the pager will alert you by a tone have been selected when receiving a call.
- \*SIL – It stands for silent and means Vibration Alert mode in which the pager will vibrate, instead of beep, to alert you when receiving a call.
- \*SLP – It stands for sleep and means Mute mode in which the pager will give no alert but just keep the call for you to read later on.

13

### 3.2 TIME AND ALARM SETTING

#### Setting the Time and Day of Week

- (1) Keep on pressing the MODE button until the word "TIME?" appears in the LCD.
- (2) When the day of week is flickering, keep on pressing the READ button until the day of week you want appears.
- (3) Press the LOCK button once and the day of week you want will be set. Then, the hour digit will flicker.
- (4) Repeating steps (2) & (3), the hour and minute digits can be set accordingly. (When you are setting the hour digit, the last alphabet will change from "A" to "P" or vice versa whenever the hour digit goes from 12 to 1. "A" stands for AM while "P" for PM.)
- (5) After completing the time setting, the pager will go back to normal receiving status.

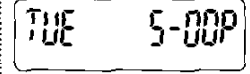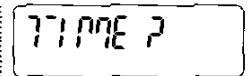

15

- (6) Press the SET button to confirm your choice and the pager will go back to normal receiving status.


#### Remarks

- This alarm clock still functions even when the pager is off.
- If alarm is not wanted, set the pager to "ALM DISABLE" in the alarm setting display.

### 3.3 AUTO POWER ON/OFF


\*With this function enabled, the pager will power on and off automatically in the pre-set time. People usually pre-set an auto-off time during the night and an auto-on time during the morning. It can save battery as well as avoid unpleasant disturbance during the night.

- (1) Keep on pressing the SET button until the words "PGR AUTO?" appears in the LCD.
- (2) Then, press the LOCK button once and the Auto On/Off setting display appears as the picture beside with the Auto-on time digit (on the left side) flickering.
- (3) Keep on pressing the READ button until the Auto-on time you want appears.

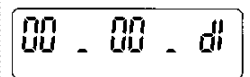

17


- (4) Press the LOCK button once and the Auto-off time digit (in the middle) is flickering.
- (5) Keep on pressing the READ button and you can set the Auto-off time.
- (6) Then, press the LOCK button once again and you can choose between EN or SL or DI on the right side of the display.

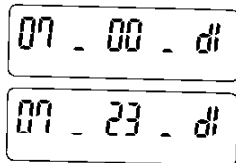

#### The meanings of EN/SL/DI:


- Choosing EN means that you want the pager to automatically power on in 7 o'clock every morning and off in 11 o'clock every night.
- Choosing SL means that you want the pager to go into MUTE mode (as mentioned in Section 2.5) from 11 o'clock every night to 7 o'clock the next morning. (Please note that in MUTE mode the pager still receive call for you to read later while during power-off status the pager does not receive call at all.)
- Choosing DI means this Auto Power On/Off function is disable.

\* If you do not want this Auto Power On/Off function, please set it to DI in the Auto-On/Off setting display.

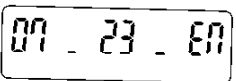

18

- (4) Keep on pressing the READ button until you find the melody or beep tone you like.
- (5) Press the LOCK button. Then the one shown in the LCD would be chosen and the pager will go back to normal receiving status.

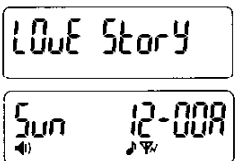

### 3.5 UNREAD MESSAGE REMINDER

\*When this function enabled, the pager will remind you with a beep tone in every 2 minutes if there is any message which have not yet been read.

- (1) Keep on pressing the SET button until the word "REMINDER?" appears in the LCD.
- (2) Press the LOCK button once and the LCD will display the present setting. As the picture beside, the pager now has the reminder function enabled.




20

## CANNED MESSAGE SETTING

#### To Set Canned Messages Into The Pager:

1. Continue pressing the SET button until the word "canned 0" appears.
2. Select the number canned message number by pressing the READ button (ten canned message are available to insert into your pager).
3. Select the insert mode of canned message by pressing the LOCK button.
4. Select the characters of the canned message by pressing the READ button or the SET button. When you select which character you want, then move to the next position by pressing the LOCK button.
5. To complete the process, repeat method (4) until the 10 digit canned message has been programmed (each canned message's memory is 10 digits). For example: if you program number 0 message "call home" and somebody pages you and presses \* 0, the pager will display "call home". Please note some paging terminals use a

- (7) After choosing the right setting, press the LOCK button once and you now have the Auto-on/off function enabled. Then the pager will go back to normal receiving status.

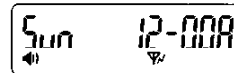


### 3.4 TONE / MELODY ALERT SETTING

This pager comes with 4 beep sounds and 16 melodies for you to choose as the alert tone when a call is received.


Choose the Alert Tone you Like:

- (1) Keep on pressing the SET button until the word "ALERT?" appears.
- (2) Press the LOCK button once and the LCD will show you the melody in use.
- (3) Press the READ button once and you can hear the next melody with the title shown in the LCD.

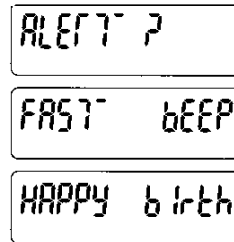

19

- (3) Press the READ button to choose the setting between "ENABLE" and "DISABLE".
- (4) Having chosen the one you want, press the LOCK button once and the pager will go back to normal receiving status.

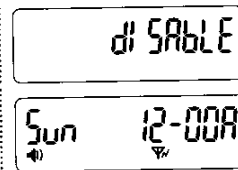

#### Remarks

If there unread message, there will be a Unread Message Icon on the bottom of the LCD. And the pager will beep in every 2 minutes if this reminder function is enable.

### 3.6 SPECIAL INFORMATION DISPLAY

When pressing the SET button, you may find the a display with the wording "DISP S\_?" as the picture. The special information display function requires **MAY NOT** be available in your country or region (in fact, most regions in the world does not have this function). For more details on the availability and the user instruction of the function, please contact your paging network operation.

21

different sequence but most use "\*" followed by a number, Ask your earrier for his specific sequence.

6. To revise your canned messages, repeat the above process of #2 thru #3.
7. After finishing your process of canned message programming, you can give the corresponding canned message numbers to the people you want to use these messages when paging you.

#### To Use Canned Messages:

1. The caller phones your pager. The caller presses the "\*" and number of canned message. For example, the caller presses \* 1. If the contents of the canned message you programmed in your pager was "get milk", then your pager will display "get milk" on the screen.