



THE SECURITY ALARM SHOP

Instructions for LYNX 5210 alarm system

To Arm Alarm when going out:

Press ARM AWAY. Enter four digit code assigned to you. This will give you a 60 second countdown to exit. If you forget something and need to reenter the building, do not try to beat the countdown. Disarm the system, then rearm the system when you are leaving again.

To Arm Alarm while staying in:

Press ARM STAY. Enter four digit code assigned to you. This will arm the system in the STAY mode, which means all doors and windows will be armed but the Motion Detectors will not be armed. This allows you to move around inside the building and not set off any alarms while still protecting the perimeter of the building. You still get a 60 second countdown in ARM STAY but you are not required to leave.

To Disarm Alarm:

When you enter the predetermined entry door (with delay), the system keypad will start a 30 second countdown and start to beep. You must go to the touchpad and enter your four digit code to disarm the alarm system. If you do NOT enter the correct code in time, the alarm will sound and the alarm will send a message to our monitoring station. Text messages are sent out immediately. Two phone numbers of your choosing are called, and if the correct password is not given the police are then dispatched. After dispatch, we will continue to call people on your call list until someone is notified or the end of the list is reached.

To Bypass Zones:

All zones must be closed in order for the alarm to show READY so you can arm the system. At times you will need to bypass zones so you can arm the system. Example: One of your magnetic contacts is malfunctioning and it shows that the zone is open no matter what you do. You can bypass this zone temporarily until we can come out to fix the problem. Let's say zone 02 Living room window is showing FAULT, or OPEN. Select Security, then go to ZONES. Select zone you want bypassed and select BYPASS. Enter code, Select BACK and then arm system. You then can arm the system like normal, keeping in mind that zone 02 is now being ignored. You must bypass each time you arm the system, as this is a temporary, not permanent, fix.

Chime and Volume:

The chime feature will emit a chime from the keypad whenever a door or window is open. Some people like this feature and some find it annoying. To toggle the chime sound on or off, please go into settings. You will be able to adjust the volume of the chime here or turn it off and on by pressing the chime bubble. Remember to save your changes or you will have to repeat the process.

If you do set off alarm accidentally:

Do not wait for the monitoring station to call. All authorized people allowed to open/close should know the number to call and the password to call off the police. Upon false alarm, immediately call 1-800-482-9800 and tell them your password.

Understanding user numbers and codes:

The LYNX 5210 can accommodate up to 32 different users. The master user has control of adding and deleting user codes. Normal guest and secondary users can only arm and disarm the system. Whenever a user arms or disarms the alarm the user number slot is recorded in the event log so you can see who armed or disarmed the system. Each user can be programmed with unique codes. Please keep track of who is assigned to these user numbers in case you need to change their codes or delete them completely from the system. Only the master user can add, change or delete codes. To add or change a code, use the following sequence: Press TOOLS then enter your MASTER CODE. Press USERS. Select the user code you want to edit by pressing on it. If you want to make a new user code then press ADD NEW. To DELETE a code select the code and press DELETE. Remember to save your changes or you will have to repeat the process.